

Exploded view of Lever Type Starter System. 2 Other Starter Types, Cable and Knob are also available.

Mikuni VM Spigot Mount Carburetor Exploded View






MK-404 Carb Tool Kit
MK-403/1 Main Jet Hex Tool (included in Kit)

 


VM26 Rebuild Kit Part No. MK-606

Kit Parts	Description
VM26/26	Needle Valve Seat 2.5
VM26/25	Washer, Needle Valve
VM20/492	Bowl gasket
BN042.64	Drain Plug Gasket
VM14/73	Air Screw
VM14.75	O-Ring, Air Screw
VM15/11	Spring, Air Screw
603-16002	Idle Screw
BV32/04	O-Ring, Idle Screw
VM26/197	Spring, Idle Screw
VM20/369	E-Clip, Jet Needle
VM26/57	Gasket, Top Cover
VM26/46	Rubber Cap, Cable Guide
CW2=0416	Float Bowl Screws (4)

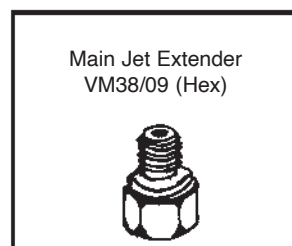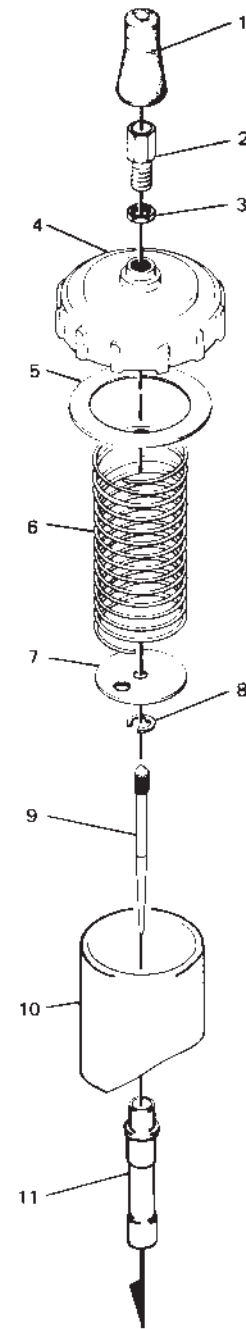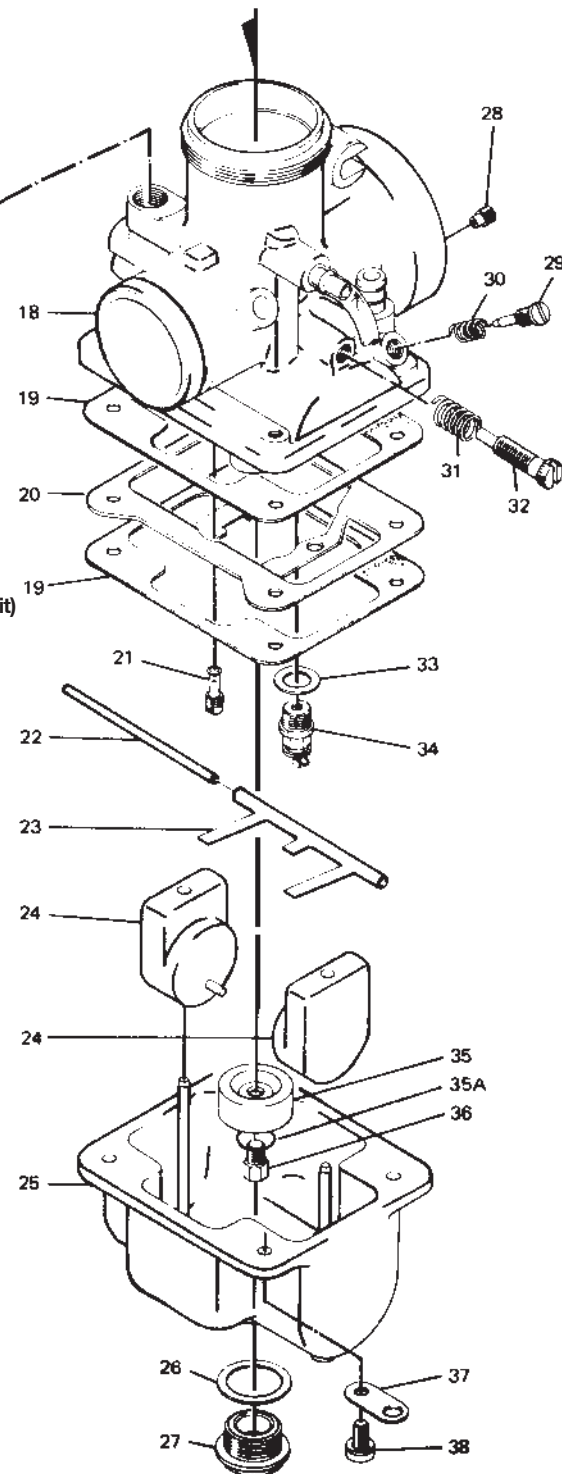

Main Jet Extender
VM38/09 (Hex)



VENT HOSE
VM14/49

ITEM NUMBER and DESCRIPTION	VM26	VM28	VM30	VM32	VM34	VM36	VM38	VM40	VM44
1. RUBBER CAP, throttle cable									
2. CABLE ADJUSTER				VM26/46					
3. LOCKNUT, cable adjuster				M21/14					
4. TOP, mixing chamber				B30/247					
5. GASKET, mixing chamber top				VM34/27		VM36/09			VM44/05
6. SPRING, throttle valve				VM34/29		VM36/06			
7. PLATE, spring seat				VM34/31		VM35/09			VM44/13
8. CLIP, needle positioning				VM20/369					BS32/126
9. NEEDLE				#6 Series					#7 Series
10. THROTTLE VALVE (SLIDE)				VM34/110		VM36/36			VM40/02
11. NEEDLE JET				VM34/05 159		VM34/17(166)			VM44/10(224)
12. RUBBER CAP, starter plunger				VM20/455					
13. FITTING, starter plunger						VM20/456			
14. LEVER, starter		VM26/116							
15. SPRING PLATE, starter level		VM28/135 VM28/497		VM28/124		VM32/53			VM36/58
16. SPRING, starter plunger		VM26/09				VM32/17			
17. PLUNGER, starter				VM16/42					
18. BODY, mixing chamber									
19. GASKET, float bowl				VM30/103 999-631-010		VM36/20			VM36/20
20. BAFFLE PLATE, float bowl				VM34/72		VM36/40			VM44/12
21. PILOT JET				VM22/210					
22. PIN, float arm hinge				BV26/22					
23. ARM, float				VM34/73					VM36/15
24. FLOAT				VM34/61					VM24/236
25. BOWL, float				VM34/68					VM44/04-80
26. WASHER, main jet plug				4/053					VM28/134
27. DRAIN PLUG, float bowl				VM34/42		VM28/253			VM28/133
28. AIR JET				BS30/97					
29. AIR ADJUSTING SCREW				VM20/214					
30. SPRING, air adjusting screw				M12F/46A					
31. SPRING, idle adjusting screw				M20/11					
32. IDLE ADJUSTING SCREW				VM24/224		VM22/171			VM24/224
33. WASHER, needle valve				B34/52 0.8, 1.0					
34. NEEDLE VALVE & SEAT ASSY.				VM34/39					or VM38/11-3.5
35. RING, main jet				VM36/17					VM28/228
36. MAIN JET									
37. PLATE, vent tube anchor				4/042					
38. SCREW, float bowl				VM28/79					
				CW2=0518					
									CW2=0516
									CW2=0518